


# WOODFOLD

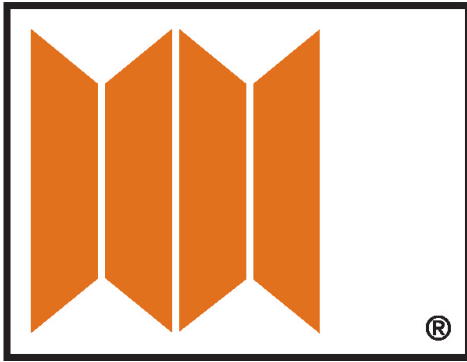

## ASSEMBLING A FACTORY INTERMEDIATE ROLLING POST

DOOR SERIES: 3300

BULLETIN B7-110127


3300 series doors are heavy! For ease of handling Woodfold divides the door into convenient sections and provides the means to connect them using Intermediate Rolling Posts.

Before installing the door, look over the sections and understand their order. It is frustrating to have all the door sections up on the tracks, only to discover they are in the wrong order or flipped end for end. If you have questions call Customer Service at Woodfold.

Once the door sections are hung, locate the  $2\frac{1}{8}$ " x  $2\frac{1}{2}$ " posts. A post will be about 2 inches shorter than the door panel is tall and have 1" air vent holes spaced about 10 inches apart.

Hold the post in place between the Post Mounting Panels using clamps. The post should be about 1" down from the top of the door panel. The inside edge of the Post Mounting Panel must be on the pencil scribe line.

**Please!** Confirm the Post Mounting Panel edge is on the pencil scribe mark on BOTH sides of the post. If you miss the mark the door will twist and not hang correctly.

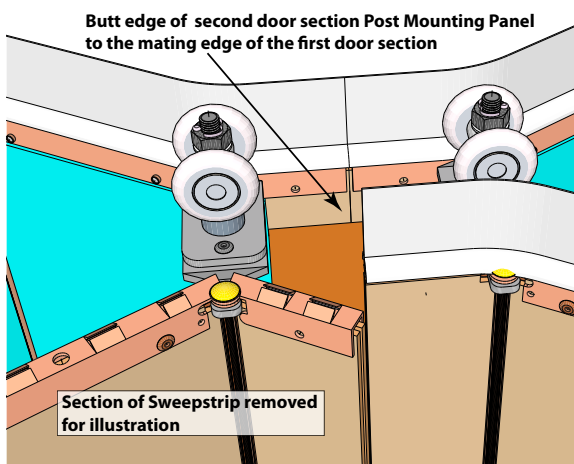

Drive the #6 x  $1\frac{1}{2}$ " screws through the pre-drilled holes in the Post Mounting Panels into the post.

Remove the clamps and butt the Post Mounting Panels of the adjoining section to the secured set and screw them to the post.

**Intermediate Rolling Post installation is complete!**

